

SPECTRUM MULTI-SPORT 250 CONTROLLERS (NON-BATTERY)
OPERATION INSTRUCTIONS

When a controller is plugged into the 3 pin female receptacle, the top left Red LED Indicator on the keypad will illuminate Red stating that both the controller and scoreboard have power. The top right Green LED Indicator on the keypad will illuminate Green stating that the clock is ON.

BALL – This switch will advance the ball indicator by one, then to blank.

STRIKE – This switch will advance the strike indicator by one, then to blank.

OUT – This switch will advance the out indicator by one, then to blank.

HOME – This switch will advance the home score digit by one. To reset the score to “0” press **RESET** then **HOME**. To enter a number i.e. 12 press # then 1 then # then 2 then **HOME**.

INN – This switch will advance the innings digit by one. To reset the inning to “0” press **RESET** then **INN**. To enter a number i.e. 12 press # then 1 then # then 2 the **INN**. In football and basketball modes, this key will operate **QUARTER** (see Function).

VIS – This switch will advance the visitor score digit by one. To reset the score to “0” press **RESET** then **VIS**. To end a number i.e. 12 press # then 1 then # then 2 then **VIS**.

HIT – This switch will toggle hit indicator; Press again, the indicator will go off. In basketball mode this key operates **HOME BONUS** (see Function).

**FOR SERVICE OR ASSISTANCE,
PLEASE CALL 800-392-5050**

**SHIPPING ADDRESS: SPECTRUM SCOREBOARDS
10049 EASTHAVEN, HOUSTON, TX 77075**

POSS – On basketball and football scoreboards with possessing indicators, pressing this switch will alternate the indicator for home or visitor. On baseball scoreboards this will alternate the **AT BAT** indicator between home and visitor or top and bottom of inning indicators on models with these features.

ERROR – This switch will toggle the error indicators; Press again, the indicator will go off. In basketball mode this key operates **VISITOR BONUS**.

- Press this key then a single digit each time a number is entered from this keypad. (Refer to **HOME** score example sequence)

RESET – Key used to reset scores and innings to “0”.

MANUAL HORN – In basketball mode, press this key to activate the horn.

CLOCK SET – To enter time on the clock (models with clocks) press # before each digit, then **CLOCK SET**. The **MS-250** controller allows countdown clock only.

CLOCK ON/OFF – Pressing with switch will turn on the clock. When the clock is on, the top right Green LED on the key pad will illuminate Green. On the scoreboard (baseball), when the clock is off, the colons beside the digits will flash.

AUTO HORN – (Built-in feature for football and basketball scoreboards) When the clock reaches “0”, the horn (if one is preset) will blow for two seconds then turn itself off.